

Revision 1.11 May 21st, 2012

Revision History

| Revision | Date | Description | |
|----------|------------|---|--|
| 1.00 | 2010/04/29 | Initial release | |
| 1.10 | 2010/06/21 | 1. Added AX88772B USB to 100Base-TX Ethernet (with RMII) | |
| | | Demo Board related information. | |
| | | 2. Updated the Selection Guide in Section 3. | |
| | | 3. Updated AX88772B demo boards naming in Section 4 and 7. | |
| | | 4. Updated Figure 9 "AX88772B USB to 100Base-TX Ethernet Demo | |
| | | Board" picture in Section 7-1. | |
| | | 5. Modified some descriptions in Section 8. | |
| 1.11 | 2012/05/21 | 1. Updated the Selection Guide in Section 3. | |
| | | 2. Corrected a typo in Section 6. | |
| | | 3. Modified some descriptions in Section 8. | |

Table of Contents

| 1. I | ntroduction | 4 |
|----------------------------------|---|--|
| 2. I | Block Diagram | 5 |
| | Typical System Block Diagrams | |
| | Selection Guide | |
| | Ordering Information | |
| | Γarget Applications1 | |
| | Mass Production Solutions 1 | |
| | Windows SROM Programming Tool | |
| 7. A | AX88772B Demo Boards 1 | 13 |
| 7-2. 7-3. | AX88772B USB to 100Base-TX Ethernet Demo Board | 14 15 |
| 8. I | Related Technical Archives1 | 18 |
| | List of Figures | |
| Figure 1. | Block Diagram | .5 |
| Figure 2. | USB 2.0 to LAN Adaptor (MAC mode) | |
| Figure 3. Figure 4. | Bridging Embedded MCU to USB 2.0 Host Interface (PHY mode) | |
| Figure 5. | USB 2.0 to HomePlug Adaptor (PHY mode) | |
| Figure 6. | Selection Guide | |
| Figure 7. | Ordering Information | . 0 |
| Figure 8. | Target Applications | .9 |
| Figure 9. | | .9 10 |
| Figure 10. | Windows SROM Programming Tool | .9 10 11 |
| | Windows Production Test Tool | .9 10 11 12 |
| Figure 12. | Windows Production Test Tool | .9 10 11 12 13 |
| Figure 12. | Windows Production Test Tool | .9 10 11 12 13 |
| Figure 12. Figure 13. | Windows Production Test Tool AX88772B USB to 100Base-TX Ethernet Demo Board AX88772B USB to 100Base-TX Ethernet (with RMII) Demo Board AX88772B USB to 100Base-FX 1x9 SC Ethernet Demo Board | .9 10 11 12 13 14 |
| Figure 12. | Windows Production Test Tool | .9 10 11 12 13 14 15 |
| Figure 12. Figure 13. Figure 14. | Windows Production Test Tool AX88772B USB to 100Base-TX Ethernet Demo Board AX88772B USB to 100Base-TX Ethernet (with RMII) Demo Board AX88772B USB to 100Base-FX 1x9 SC Ethernet Demo Board | .9 10 11 12 13 14 15 16 17 |

ASIX

AX88772B Product Introduction

1. Introduction

The AX88772B Low-power USB 2.0 to 10/100M Fast Ethernet controller is a high performance and highly integrated ASIC which enables low cost, small form factor, and simple plug-and-play Fast Ethernet network connection capability for desktops, notebook PC's, Ultra-Mobile PC's, docking stations, game consoles, digital-home appliances, and any embedded system using a standard USB port.

The AX88772B features a USB interface to communicate with a USB Host Controller and is compliant with USB specification V1.1 and V2.0. The AX88772B implements a 10/100Mbps Ethernet LAN function based on IEEE802.3, and IEEE802.3u standards with embedded SRAM for packet buffering. The AX88772B integrates an on-chip 10/100Mbps Ethernet PHY to simplify system design.

The AX88772B provides an optional Multi-Function-Bus portion A and B (MFA and MFB) for external PHY or external MAC for different application purposes. The MFA/MFB can be a reduce-media-independent interface (RMII) for implementing 100BASE-FX Ethernet or HomePNA functions. The MFA/MFB can also be a Reverse Reduced-MII (Reverse-RMII) for glueless MAC-to-MAC connections to any MCU with Ethernet MAC RMII interface. In addition, the MFA/MFB can be configured as general purpose I/O.

The following URL provides detailed online resources of ASIX Electronics high-speed USB-to-LAN solutions:

(Refer to http://www.asix.com.tw/products.php?op=ProductList&PLine=71)

Low-power USB2.0 to 10/100M Fast Ethernet Controller

AX88772B -- Low-Power USB2.0 to 10/100M Fast Ethernet Controller

This document provides an overview of AX88772B Low-Power USB to 10/100M Fast Ethernet controller product.



2. Block Diagram

The following is AX88772B block diagram,

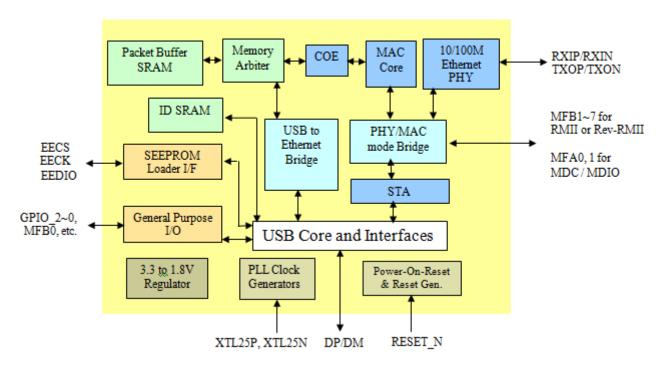


Figure 1. Block Diagram



2-1. Typical System Block Diagrams

• Hosted by USB to operate with internal Ethernet PHY only

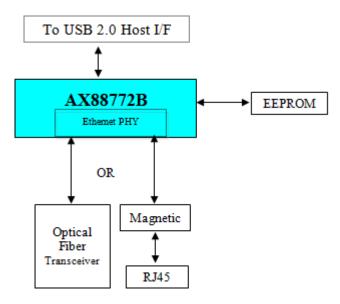


Figure 2. USB 2.0 to LAN Adaptor (MAC mode)

Hosted by USB to operate with either internal Ethernet PHY or RMII (in MAC mode)

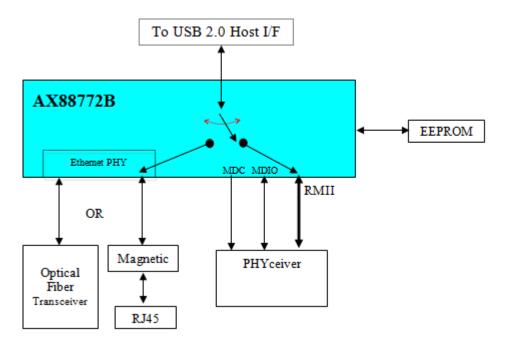


Figure 3. USB 2.0 to Fast Ethernet and external PHYceiver Combo (MAC mode)



• Hosted by USB to operate with either internal Ethernet PHY (in MAC mode) or Reverse-RMII (in PHY mode)

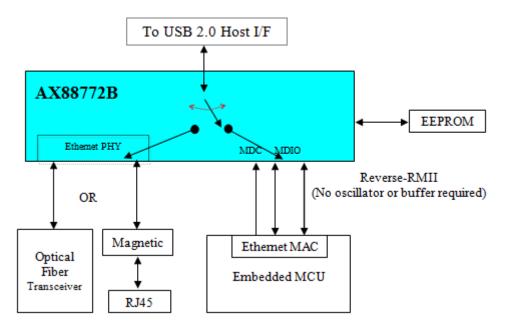


Figure 4. Bridging Embedded MCU to USB 2.0 Host Interface (PHY mode)

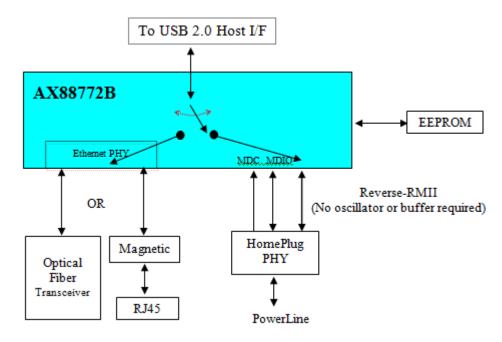


Figure 5. USB 2.0 to HomePlug Adaptor (PHY mode)



3. Selection Guide

The following is the selection guide of ASIX Electronics USB to Ethernet family for different requirement applications. Please visit ASIX Electronics' High-Speed USB-to-LAN product web page (http://www.asix.com.tw/products.php?PLine=71) and contact ASIX's Sales (sales@asix.com.tw) for details.

| Part No. USB Speed | | USB Hub | Ethernet MA PHY (Mbps | | MAC Inte | erface | Dete | ossover ection and -correction |
|--------------------------------|-----------------------------------|-----------------|--|----|---|--------------|------------------------------|--------------------------------------|
| AX88179 | AX88179 Super (3.0) - 10/100/1000 | | 141 | | | v | | |
| AX88178 | High (2.0) | - | 10/100/100 (MAC only | | MII/GI RGM | | | -1 |
| AX88760 | High (2.0) | 3-Port | 10/100 | | - | | | ٧ |
| AX88772B | High (2.0) | - | 10/100 | | RMII/F RMII(Opt | | | V |
| AX88772A | High (2.0) | - | 10/100 | | - | | | V |
| AX88172A | High (2.0) | 7 | 10/100 | | (Rev-) Rev-R | | | V |
| AX88772 | High (2.0) | - | 10/100 | | MII | | | - |
| Part No. | IP/TCP/UDP Checksum | Wake- on-LAN | Serial Interface | | nperature ange (°C) | Pack | age | |
| | | | | | | | | |
| AX88179 | v | V | - | - | 0 ~ +70 | QFN | -68 | |
| AX88179 AX88178 | v - | v v | | | 0 ~ +70 0 ~ +70 | QFN LQFP | | |
| | v - | | | | | | -128 | |
| AX88178 | v - - v | V | -: -: | | 0 ~ +70 | LQFP | -128 -100 | |
| AX88178 AX88760 | | v | - - - I ² C, SPI UART | -4 | 0 ~ +70 0 ~ +70 0 ~ +70/ | LQFP | -128 -100 P-64 | |
| AX88178 AX88760 AX88772B | - ' | v v | | -4 | 0 ~ +70 0 ~ +70 0 ~ +70/ 5 ~ +85 | LQFP LQFP | -128 -100 2-64 2-64 | |

Figure 6. Selection Guide

4. Ordering Information

The following are the ordering information of AX88772B silicon and AX88772B demo boards. Please contact ASIX's Sales (sales@asix.com.tw) for more details.

| Part Number | Description |
|-------------|--|
| AX88772BLF | 64 PIN, LQFP Package, Commercial grade 0°C to +70 °C |
| | (Green, Lead-Free) |
| AX88772BLI | 64 PIN, LQFP Package, Industrial grade -40°C to +85 °C |
| | (Green, Lead-Free) |

| AX88772B Demo Boards | Description | | | |
|---------------------------------|--|--|--|--|
| AX88772B USB to 100Base-TX | This is a USB dongle for AX88772B USB to 100Base- | | | |
| Ethernet Demo Board | TX Ethernet application | | | |
| AX88772B USB to 100Base-TX | This is a general-purpose demo board for AX88772B | | | |
| | LISB to IUUBase-IX Ethernet (With Ontional RIVIII/Rev- | | | |
| Ethernet (with RMII) Demo Board | RMII interface) application | | | |
| AX88772B USB to 100Base-FX | This is a general-purpose demo board for AX88772B | | | |
| 1x9 SC Ethernet Demo Board | USB to 100Base-FX 1x9 SC Fiber Ethernet (with | | | |
| 1x9 SC Ethernet Demo Board | optional RMII/Rev-RMII interface) application | | | |
| | This is a general-purpose demo board for AX88772B | | | |
| AX88772B USB to 100Base-FX | USB to 100Base-FX POF (Plastic Optical Fiber) Fiber | | | |
| POF Ethernet Demo Board | Ethernet (with optional RMII/Rev-RMII interface) | | | |
| | application | | | |

Figure 7. Ordering Information

5. Target Applications

The following are some PC/Internet and consumer electronics target applications for your reference.





Figure 8. Target Applications



6. Mass Production Solutions

To support the mass production for those products using AX88772B chips. ASIX provides the Windows SROM Programming Tool and Windows Production Test Tool solutions for AX88772B customers. This chapter provides a brief introduction for both solutions. Please refer to "AX88772B EEPROM User Guide" for details.

6-1. Windows SROM Programming Tool

ASIX Electronics provides a Windows SROM Programming tool for users to easily program the Serial EEPROM of AX88772B on a typical Windows 7/Vista/XP/2000 PC. This AX88772B Windows SROM Programming Tool supports to customize the MAC address, Serial Number, Vendor ID and Product ID, etc. for AX88772B based application systems in mass production.

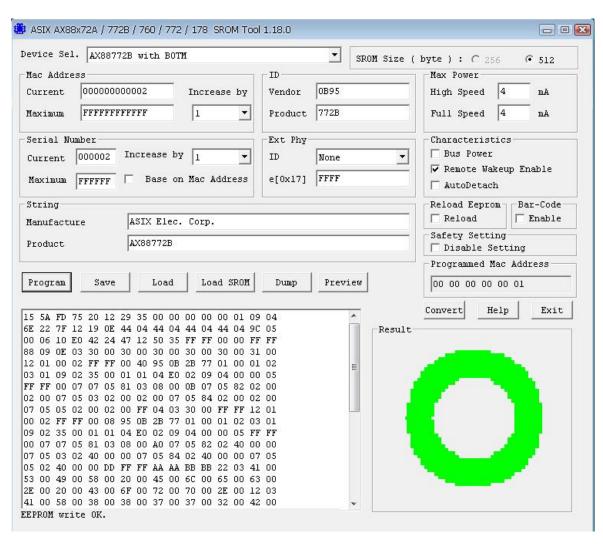


Figure 9. Windows SROM Programming Tool



6-2. Windows Production Test Tool

ASIX Electronics provides a Windows Production Test tool for users to run some basic network function tests and program the EEPROM of their AX88772B based application systems during production. This tool is used for testing the USB to Ethernet Network Adapter product that uses ASIX AX88772B chip.

This tool supports to send/receive packets in different Ethernet speed modes, and program EEPROM. This tool can be run on a Windows 7/Vista/XP/2000 PC, which installs the special AX88772B Windows test driver. This tool also needs a separate server PC to run the test server tool. The test server tool on server PC can receive packets from the "device under test" product, and then reply back.

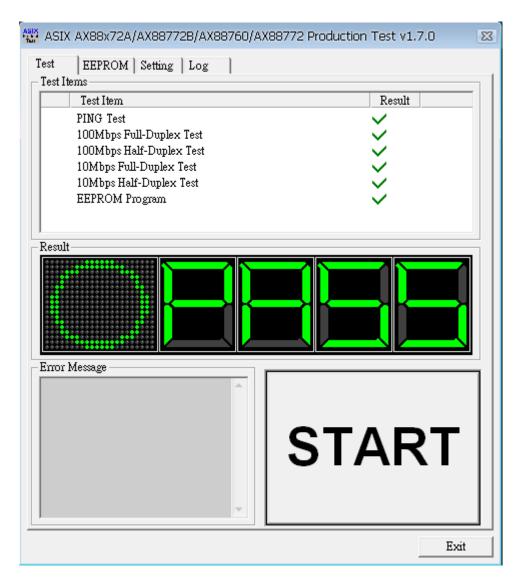


Figure 10. Windows Production Test Tool



7. AX88772B Demo Boards

ASIX Electronics provides several AX88772B demo boards for users to evaluate the basic functions of AX88772B on different target applications. If you need to purchase the AX88772B demo boards, please contact ASIX's Sales (sales@asix.com.tw) for more details.

7-1. AX88772B USB to 100Base-TX Ethernet Demo Board

The following is the picture of AX88772B USB to 100Base-TX Ethernet demo board for your reference.

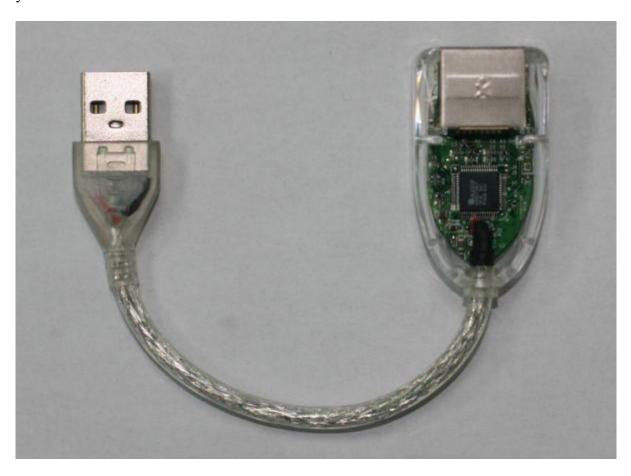


Figure 11. AX88772B USB to 100Base-TX Ethernet Demo Board



7-2. AX88772B USB to 100Base-TX Ethernet (with RMII) Demo Board

The following is the picture of AX88772B USB to 100Base-TX Ethernet (with RMII) demo board for your reference.

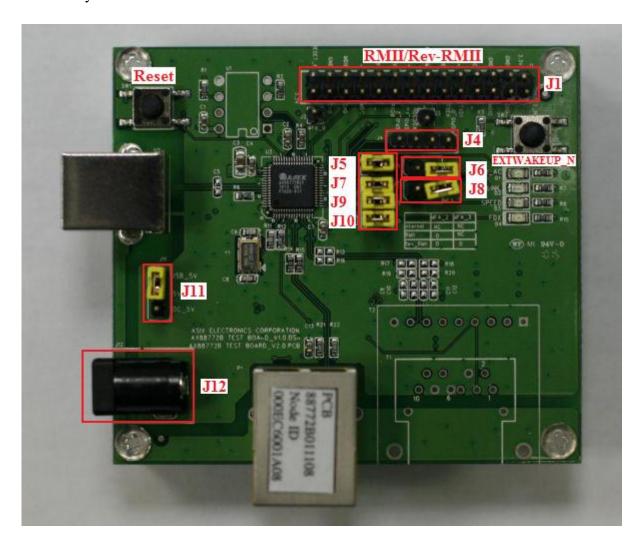


Figure 12. AX88772B USB to 100Base-TX Ethernet (with RMII) Demo Board



7-3. AX88772B USB to 100Base-FX 1x9 SC Ethernet Demo Board

The following is the picture of AX88772B USB to 100Base-FX 1x9 SC Ethernet demo board for your reference.

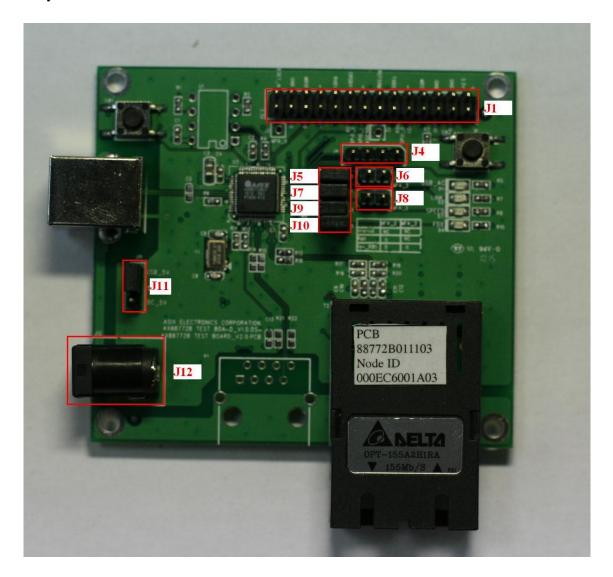


Figure 13. AX88772B USB to 100Base-FX 1x9 SC Ethernet Demo Board



7-4. AX88772B USB to 100Base-FX POF Ethernet Demo Board

The following is the picture of AX88772B USB to 100Base-FX POF Ethernet demo board for your reference.

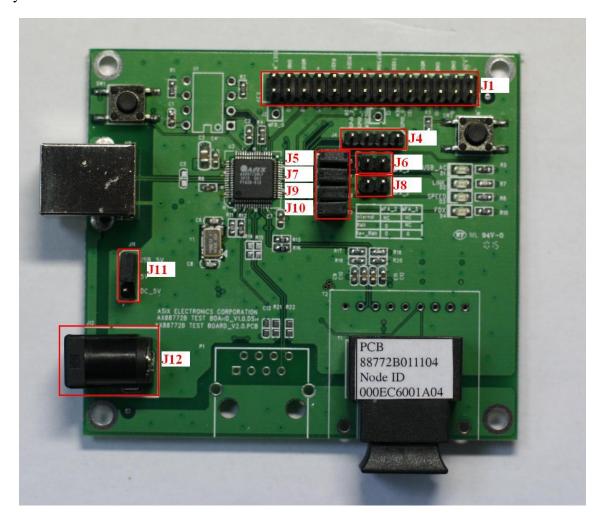


Figure 14. AX88772B USB to 100Base-FX POF Ethernet Demo Board

The following is the jumper configuration table of the AX88772B USB to 100Base-TX/FX Ethernet (with RMII) demo boards.

| Jumper | Setting | Description |
|--------------|--|--|
| J1 | 27 1 | The J1 is the RMII/Reverse-RMII interface headers. |
| | J1 28 2 | Please refer to AX88772B USB to 100Base- |
| | 26 2 | TX/FX Ethernet (with RMII) Demo Boards |
| | | Reference Schematic for details. |
| J4 | J4 12 3 4: Pole #1: GPIO2 Pole #2: VCC 3.3V Pole #3: GPIO1 Pole #4:GPIO0/PME | AX88772B GPIO Pins |
| J6/J8 | J6 I J8 (Default) | Set AX88772B to Internal Ethernet PHY |
| | J6 💶 J8 🚾 | Set AX88772B to RMII mode |
| | J6 J8 J8 | Reserved |
| | J6 J8 | Set AX88772B to Reverse-RMII mode |
| J5/J7/J9/J10 | J5 : PHY_N J7 : RMII_N J9 : MDIO J10 : MDC | The multi-function pins (PHY_N, RMII_N, MDIO, MDC) for RMII/Reverse-RMII pins. |
| | J5 J7 J9 J10 (Default) J5 : MFA3 J7 : MFA2 J9 : MFA1 J10 : MFA0 | The multi-function pins (MFA0 ~ MFA3) for LED display purpose. Please refer to PIN configuration of MFA in section 2.2 of AX88772B datasheet for details. |
| J11/J12 | J11 (Default) Pole #1: USB_5V Pole #2: 5V Pole #3: DC_5V | Set AX88772B USB to 100Base-TX/FX Ethernet (with RMII) demo boards to Bus-power mode. The J12 connector doesn't need to be connected. |
| | J111123 | Set AX88772B USB to 100Base-TX/FX Ethernet (with RMII) demo boards to Self-power mode. The J12 connector should be connected to a 5V power adapter. |

Figure 15. AX88772B USB to 100Base-TX/FX Ethernet with RMII Demo Boards Jumper Setting Table



8. Related Technical Archives

The following is the AX88772B product web page for your reference. You can download some basic AX88772B related technical archives from this AX88772B product web page.

AX88772B - Low-pin-count USB 2.0 to 10/100M Fast Ethernet controller

(http://www.asix.com.tw/products.php?op=pItemdetail&PItemID=105;65;86&PLine=65)

| AX88772B Technical Archives | Type | Availability* |
|---|-----------|-------------------------|
| AX88772B Product Introduction | Document | This document |
| AX88772B Product Brief | Document | Public Release |
| AX88772B USB to 100Base-TX Ethernet Demo | Schematic | Public Release |
| Board Reference Schematic | | |
| AX88772B USB to 100Base-TX/FX Ethernet with | Schematic | Public Release |
| RMII Demo Boards Reference Schematic | | |
| AX88772B Windows 8 64-bit In-box Driver | Driver | Windows 8 In-box Driver |
| AX88772B Windows 8 32-bit In-box Driver | Driver | Windows 8 In-box Driver |
| AX88772B Windows 7 64-bit Driver | Driver | Public Release |
| AX88772B Windows 7 32-bit Driver | Driver | Public Release |
| AX88772B Windows Vista 64-bit Driver | Driver | Public Release |
| AX88772B Windows Vista 32-bit Driver | Driver | Public Release |
| AX88772B Windows XP 64-bit Driver | Driver | Public Release |
| AX88772B Windows XP 32-bit Driver | Driver | Public Release |
| AX88772B Android/Linux Driver | Driver | Public Release |
| AX88772B WinCE 7.0 Driver | Driver | Public Release |
| AX88772B WinCE 6.0 Driver | Driver | Public Release |
| AX88772B WinCE 5.0/Mobile 5/Mobile 6 Driver | Driver | Public Release |
| AX88772B Apple Mac OSX 10.4 to 10.7 Drivers | Driver | Public Release |
| AX88772B Datasheet | Document | MyASIX Membership |
| AX88772B USB-to-LAN Application Design Guide | Document | MyASIX Membership |
| AX88772B USB to 100Base-TX Ethernet Demo | PCB | MyASIX Membership |
| Board PCB file | | |
| AX88772B USB to 100Base-TX/FX Ethernet with | PCB | MyASIX Membership |
| RMII Demo Boards PCB file | | |
| AX88772B USB to 100Base-TX Ethernet Demo | Gerber | MyASIX Membership |
| Board Gerber files | | |
| AX88772B USB to 100Base-TX/FX Ethernet with | Gerber | MyASIX Membership |
| RMII Demo Boards Gerber files | | |
| AX88772B USB to 100Base-TX Ethernet Demo | BOM | MyASIX Membership |
| Board BOM File | | |
| AX88772B USB to 100Base-TX Ethernet with RMII | BOM | MyASIX Membership |
| Demo Board BOM file | | |
| AX88772B USB to 100Base-FX 1x9 SC Ethernet | BOM | MyASIX Membership |
| Demo Board BOM file | | |
| AX88772B USB to 100Base-FX POF Ethernet | BOM | MyASIX Membership |
| Demo Board BOM file | | |



| AV00770D IDIC Model | IBIS | My ACIV Mambarshin |
|--|----------|--------------------|
| AX88772B IBIS Model | | MyASIX Membership |
| AX88772B Reliability Report | Report | MyASIX Membership |
| AX88772B EEPROM/Manufacture User Guide | Document | Contact ASIX Sales |
| AX88772B Windows SROM Programming Tool | Utility | Contact ASIX Sales |
| AX88772B Windows Production Test Tool | Utility | Contact ASIX Sales |
| AX88772B Linux SROM Programming Tool | Utility | Contact ASIX Sales |
| AX88772B WinCE SROM Programming Tool | Utility | Contact ASIX Sales |
| AX88772B Windows IEEE 802.3 Compliant Test | Utility | Contact ASIX Sales |
| Tool | | |
| AX88772B Performance Test Report | Report | Contact ASIX Sales |
| AX88772B RoHS Report | Report | Contact ASIX Sales |
| AX88772B USB-IF Compliant Test Report | Report | Contact ASIX Sales |
| AX88772B IEEE 802.3 Compliant Test Reports | Report | Contact ASIX Sales |

Figure 16. Related Technical Archives

| Availability Type | Description |
|--------------------|---|
| Public Release | Please download the technical archives from <u>AX88772B product web page</u> directly. |
| MyASIX Membership | Please register MyASIX membership from MyASIX register web page |
| | (http://www.asix.com.tw/RegLogin.php?mod=thisis) first and then download the |
| | technical archives from AX88772B product web page. |
| Contact ASIX Sales | Please contact ASIX's Sales (sales@asix.com.tw) for more details. |

Figure 17. Technical Archives Availability Type





4F, No.8, Hsin Ann Rd., Hsinchu Science Park, Hsinchu, Taiwan, R.O.C.

TEL: +886-3-5799500 FAX: +886-3-5799558

Email: support@asix.com.tw
Web: http://www.asix.com.tw